

#### **CODE NUMBER**

3079811

#### **DESCRIPTION**

1.6 gpf, XL Sweat Solder Adapter Kit, Polished Chrome Finish, Single Flush, GEM-2® Exposed Manual Specialty Water Closet Bedpan Washer Flushometer.

#### **DETAILS**

Flush Volume: 1.6 gpf (6.0 Lpf)Finish: Polished Chrome (CP)

· Valve: Piston

• Valve Body Material: Semi-red Brass

Fixture Type: Water ClosetFixture Connection: Top spud

• Rough-In Dimension: 26 ½" (673mm)

Spud Coupling: 1 ½" (38mm)
Supply Pipe: 1" (25mm)

Adapter: XL Sweat Solder Adapter Kit (XL)

## **FEATURES**

- 1" I.P.S. Screwdriver Bak-Chek® Angle Stop
- Non-Hold-Open Handle and No External Volume Adjustment to Ensure Water Conservation
- 1 1/2" Offset Flush Tube
- Spud Coupling, Wall and Spud Flange for 11/2" Top Spud
- Vacuum Breaker Flush Connection
- ADA Compliant Metal Oscillating Handle
- Vandal Resistant Stop Cap
- Handle Packing, Stop Seat and Vacuum Breaker Molded from PERMEX® Rubber Compound for Chloramine Resistance

Bedpan Washer Diverter Assembly with the following features:

- Solid One-piece Body Construction
- Solid Brass Spray Arm
- Counter Balanced Pivot Assembly and Diverter Valve Wall Support
- Offset Flush Connection for clearance around Grab Bar installations
- Fixed Volume Piston with Filtered O-ring Bypass



## **COMPLIANCES & CERTIFICATIONS**







(ADA Compliant, cUPC Certified, BAA Compliant)

#### RECOMMENDED SPECIFICATION

Valve Body, Cover, Tailpiece and Control Stop shall be in conformance with ASTM Alloy Classification for Semi-Red Brass. Valve shall be in compliance with the applicable sections of ASSE 1037 and ANSI/ASME 112.19.2.

### **VALVE OPERATING PRESSURE (FLOWING)**

15–80 PSI (103–552 kPa). Specific fixtures may require greater minimum flowing pressure - consult manufacturer requirements.

## **DOWNLOADS**

- Control Stop Repair and Maintenance Guide
- Flush Connections Flanges Repair and Maintenance Guide
- Tail Piece Repair and Maintenance Guide
- Gem 2 Repair and Maintenance Guide
- Slimline Bedpan Washer Repair and Maintenance Guide
- Additional Downloads

# **NOTES**


All information contained within this document subject to change without notice.

Looking for other variations of the GEM-2 BPW 1150 product? View the general spec sheet with all options.

Find a compatible urinal for this flushometer.
Find a compatible water closet for this flushometer.



# **ROUGH-IN**

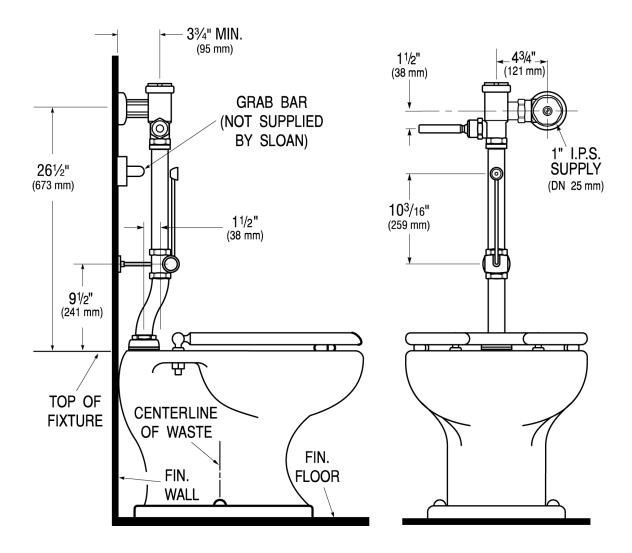

**Sloan 10500 Seymour Ave, Franklin Park, IL 60131** Phone: 800.982.5839 • Fax: 800.447.8329 • sloan.com