

#### **CODE NUMBER**

3782634

#### DESCRIPTION

1.0 gpf, Polished Chrome Finish, Single Flush, Sloan® Exposed Manual Specialty Urinal Hydraulic Flushometer.

#### DETAILS

Flush Volume: 1.0 gpf (3.8 Lpf)Finish: Polished Chrome (CP)

• Valve: Diaphragm

• Valve Body Material: Semi-red Brass

• Fixture Type: Urinal


• Fixture Connection: Top spud

• Rough-In Dimension: 11 ½" (292mm)

Spud Coupling: <sup>3</sup>/<sub>4</sub>" (19mm)
Supply Pipe: <sup>3</sup>/<sub>4</sub>" (19mm)

## **FEATURES**

- ADA Compliant Non-Hold-Open Actuator
- 3/4" I.P.S. Screwdriver Bak-Chek® Angle Stop
- Free Spinning Vandal Resistant Stop Cap
- High Back Pressure Vacuum Breaker Flush Connection with Onepiece Bottom Hex Coupling Nut
- Spud Coupling and Flange for 3/4" Top Spud
- Sweat Solder Adapter with Cover Tube and Cast Set Screw Wall Flange
- Adjustable Tailpiece
- Dual Filtered Bypass Diaphragm
- Diaphragm, Stop Seat and Vacuum Breaker to be molded from PERMEX® rubber compound for Chloramine resistance

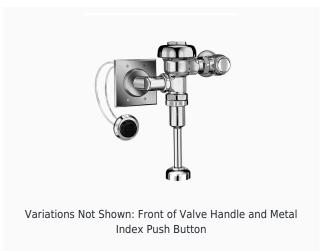

## **COMPLIANCES & CERTIFICATIONS**







(ADA Compliant, cUPC Certified, BAA Compliant)

### RECOMMENDED SPECIFICATION

Valve Body, Cover, Tailpiece and Control Stop shall be in conformance with ASTM Alloy Classification for Semi-Red Brass. Valve shall be in compliance with the applicable sections of ASSE 1037 and ANSI/ASME 112.19.2.

## **VALVE OPERATING PRESSURE (FLOWING)**

15-80 PSI (103-552 kPa). Specific fixtures may require greater minimum flowing pressure - consult manufacturer requirements.

# **DOWNLOADS**

- Sloan 900 Exposed Installation Instructions
- Control Stop Repair and Maintenance Guide
- Flush Connections Flanges Repair and Maintenance Guide
- Tail Piece Repair and Maintenance Guide
- Series 900 Flushometers Repair and Maintenance Guide
- Hydraulic Push Button Options
- Additional Downloads

# NOTES


All information contained within this document subject to change without notice.

Looking for other variations of the SLOAN 986 product? View the general spec sheet with all options.

Find a compatible urinal for this flushometer.
Find a compatible water closet for this flushometer.



## **ROUGH-IN**

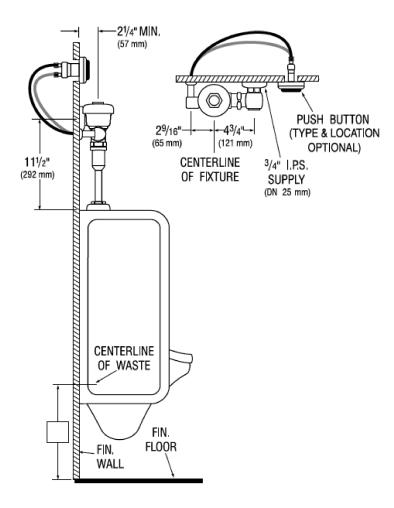

Phone: 800.982.5839 • Fax: 800.447.8329 • sloan.com